


# Energrid VS150X Power Bank

# User's Manual

Audible Version <http://bit.ly/2pco2go>

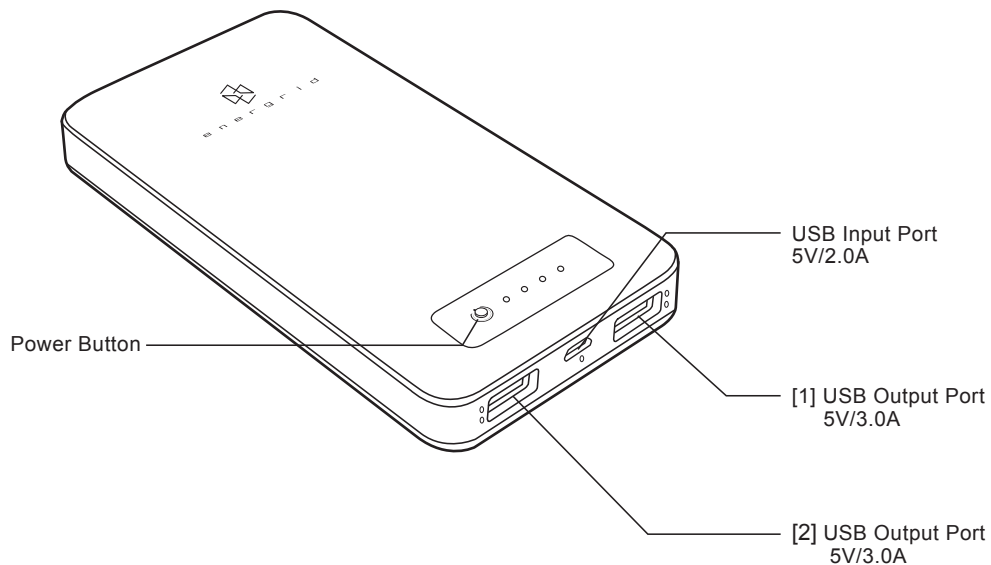

## VS150X

### To charge a digital device

1. Connect a USB charging cable to any of the USB Output Ports of VS150X.
2. Connect the digital device being charged with the other end of the USB charging cable.
3. Press the Power Button.
4. Depending on the alert mode selected, VS150X beeps and/or vibrates three times, where each beep or vibration pulse is followed by a 10-second silence if a normal connection has once been detected.
5. The digital device is now being charged.

### To charge VS150X

1. Connect a USB charging cable to a USB power adaptor. The USB power adaptor with a minimum output current of 2A that usually comes with a common smartphone or tablet is good for charging VS150X.
2. Connect the other end of the USB charging cable to the USB Input Port of VS150X.
3. Depending on the alert mode selected, VS150X beeps and/or vibrates three times, where each beep or vibration pulse is followed by a 10-second silence if a normal connection is once detected.
4. VS150X is now being charged.

### To check the battery level of VS150X

1. Press the Power Button.
2. Depending on the alert mode selected, VS150X beeps or vibrates in different patterns indicating different battery levels of:

0 % - 25% VS150X beeps and/or vibrates once

25% - 50% VS150X beeps and/or vibrates twice

50% - 75% VS150X beeps and/or vibrates three times

75% - 100% VS150X beeps and/or vibrates four times

## To select an alert mode

Press and hold the Power Button for two seconds for switching from Sound Mode to Vibration Mode, or vice versa.

---

## Cautions

- VS150X contains lithium polymer material, please handle with caution.
  - Confirm the input voltage and current of the digital device before charging.
  - Confirm the output voltage and current of the USB power adaptor before charging VS150X.
  - Do not use VS150X near a fire or in high-temperature condition.
  - Do not use VS150X in wet condition.
  - Do not disassemble or modify any parts of VS150X and its accessories.
  - Do not operate a damaged VS150X.
  - VS150X and its accessories are not toys for children and infants.
- 

## Technical Support & Customer Service

For technical questions or inquiries, please contact your local authorized dealers or email to:

[cs@energrid.us.com](mailto:cs@energrid.us.com)

