




BluBridge

mini-jack Rx

Music Receiver



User Manual

Table of Contents

• Introduction	2
• Technical Data	2
• Contents of Package	3
• Getting Acquainted.....	3
• Charging.....	4
• Turning the mini-jack Rx On/Off.....	4
• Pairing the mini-jack Rx.....	4
• Playing Music.....	5
• Visual Indicators.....	6
• Troubleshooting	6
• Support	7
• FCC Information.....	8

Introduction

The BluBridge mini-jack Rx is designed to receive music from mobile phones or transmitters that feature *Bluetooth*® wireless technology. The mini-jack Rx can be used with almost any audio receiver with an audio input jack, including automobiles. Listen to music from your smartphone or MP3 player on your existing home or car audio system.

Technical Data:

- *Bluetooth* v2.1, Class 2: 33' (10 m)
- *Bluetooth* stereo audio profile: A2DP
- Frequency: 2.4 GHz
- Certified CE and FCC

- 3.5 mm stereo audio output
- Sleep mode for power conservation
- Power supply: charges via mini-USB cable
- Operation time: up to 8 hours
- Dimensions: L 48mm/1.9in x
W 20mm /0.8in x H 12mm/0.5in


Contents of Package:

- BluBridge mini-jack Rx
- USB cable
- 3.5mm stereo cable
- 3.5mm stereo Y cable to RCA
- 3.5mm stereo adapter
- User Manual



If contents are missing or damaged, contact the merchant or contact us at support@miccus.com

Getting Acquainted

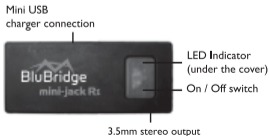

Charging

1. Using the supplied USB cable, connect the small end to the mini-USB input of the mini-jack Rx.
2. Connect the other end to the USB input of your PC, laptop or USB power converter. The mini-jack's LED light will glow red during charging.
3. When charging is finished, the red LED will turn off. A full charge will provide up to 8 hours of play time.

Turning the mini-jack Rx On/Off

Press and hold the On/Off button for 3 seconds until the blue LED light begins flashing.

To turn off, press and hold the On/Off button for 5 seconds. The red LED will light up, and then turn off.

Note: Read the user guide of your transmitter or mobile phone to find out how to turn On/Off Bluetooth wireless technology.

Pairing the mini-jack Rx

1. To enter pairing mode, press and hold the on/off button for 7 seconds or until both red and blue LEDs flash.
2. Search for the BluBridge mini-jack Rx on your mobile phone or compatible transmitter.

To complete pairing some devices require a pass key or code, use "0000."

3. The devices should now recognize each other and pair. The LED on the mini-jack Rx will slowly flash blue after successful pairing.
4. Once successfully paired, the devices can be powered off. To re-connect simply power them both on, no need to pair again.

Note: If you wish to use the BluBridge mini-jack RX with another transmitter you must restart the pairing process with the new device from step one.

After pairing the new transmitter, the old transmitter will no longer be paired to the mini-jack RX; you can have only one device connected at a time

Playing Music

1. Using the supplied audio cables and adaptors, connect the mini-jack RX to the auxiliary (AUX) input of your home or car stereo.
2. Make sure the transmitter (BluBridge mini-jack, mobile phone, or compatible source) is turned on and paired with the mini-jack Rx and that the devices are no more than 33' (10m) apart.
3. The blue LED on the mini-jack Rx will flash slowly, indicating a connection.

4. Press “play” and the music will be sent wirelessly to the BluBridge mini-jack Rx.

Note: If you cannot hear the music,

- Make sure your stereo system is set to AUX input or whichever input is the corresponding input to the mini-jack Rx.
- Check and make sure the volume is not turned down or muted.

Visual Indicators

State of the device	State of the LED
Pairing or establishing a connection	The red and blue LED flash alternatively
Connected and playing	The blue LED flashes once every 3 seconds
Sleep mode	The blue LED flashes once every 5 seconds
Charging	Solid red
Charging and connected	Solid red with slow flashing blue

Troubleshooting

The connection between the mini-jack Rx and transmitter is established once the pairing process is complete, the connection can break for the

following reasons:

- The distance between the devices is greater than 33’ (10m), or there are obstacles (e.g.: walls, furniture, etc.) between them.
- One or both of the devices has been turned off or must be recharged.
- Connection has not been made within a specific time and the device is in sleep mode or powered off. Turn on/off both devices to re-establish connection.

If for any reason the BluBridge mini-jack Rx does not re-connect or transmit audio please try the following:

- Power cycle (on/off) the mini-jack Rx and transmitter.
- Power cycle and repeat pairing process for both devices.
- Recharge both devices.

Support

Further details and answers to common questions are found at www.miccus.com/support.

If your question is not answered feel free to email at support@miccus.com. Please include the product name in your email subject line.